
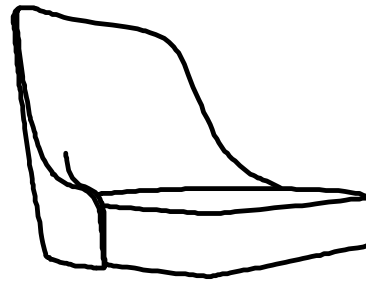


OAKLEY 203-887

ASSEMBLY INSTRUCTIONS

INSTRUCTION D ' ASSEMBLAGE

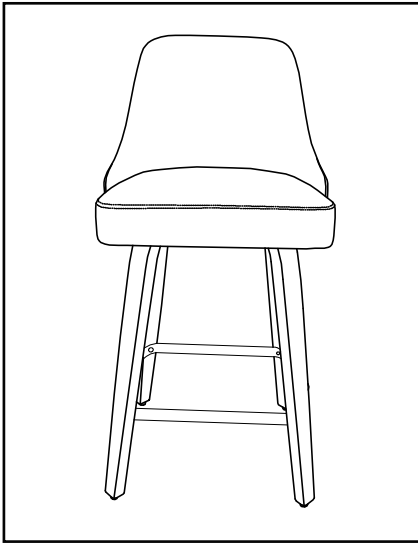


A


B




C



D×4

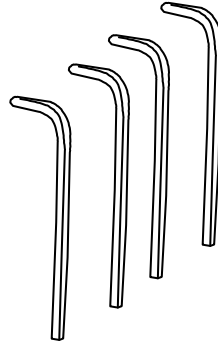

E



TURN TOP UPSIDE DOWN ON A SOFT WORKING SURFACE.

RETOURNEZ LE MEUBLE DANS L ' AUTRE SENS SUR UNE SURFACE DE TRAVAIL NON RIGIDE .

F M6*35MM



4 + 1pcs/unites

G M6*20MM



10 + 1pcs/unites

H M6*16MM



2 + 1pcs/unites

I





2pcs/unites

J M6





1pcs/unites



STEP 1 / ETAPE 1

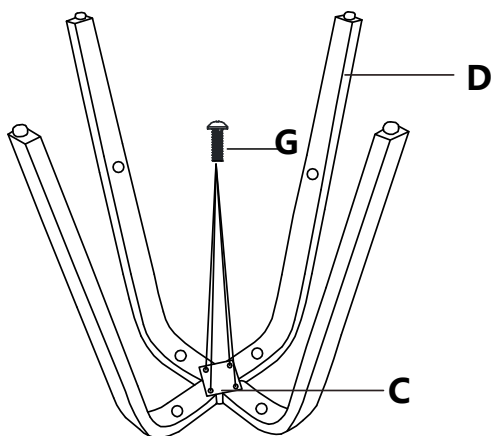

STEP 2 / ETAPE 2

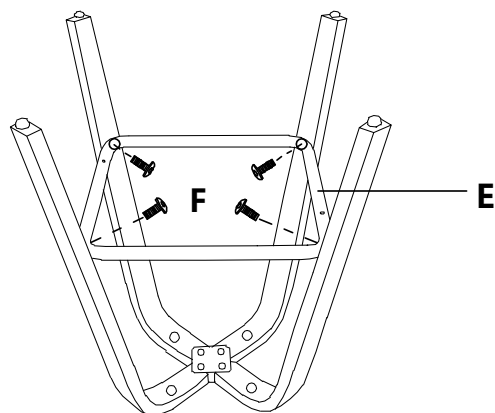

STEP 3 / ETAPE 3

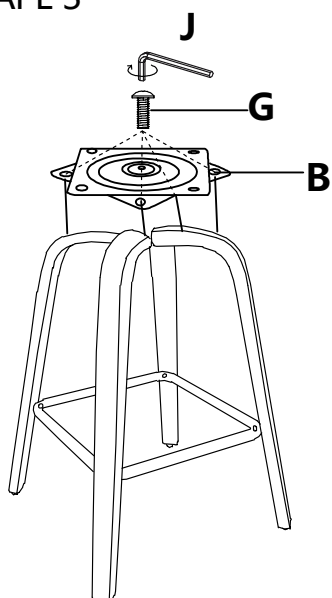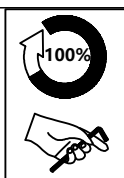

**Fasten All screws indicate on
Step 1& Step2.**

STEP 4 / ETAPE 4

